

# Harlequin Lockable 2" Fill Point Assembly Instructions



## Parts

1 x Lockable 2" Fill Point

1 x Studded Screw Insert

1 x O-ring

1x Loctite

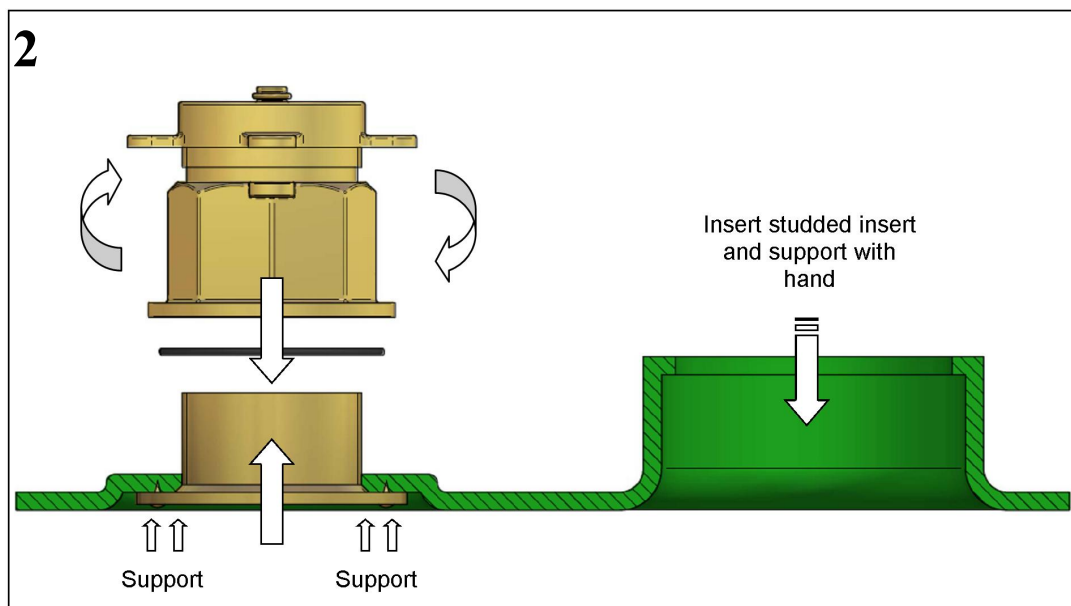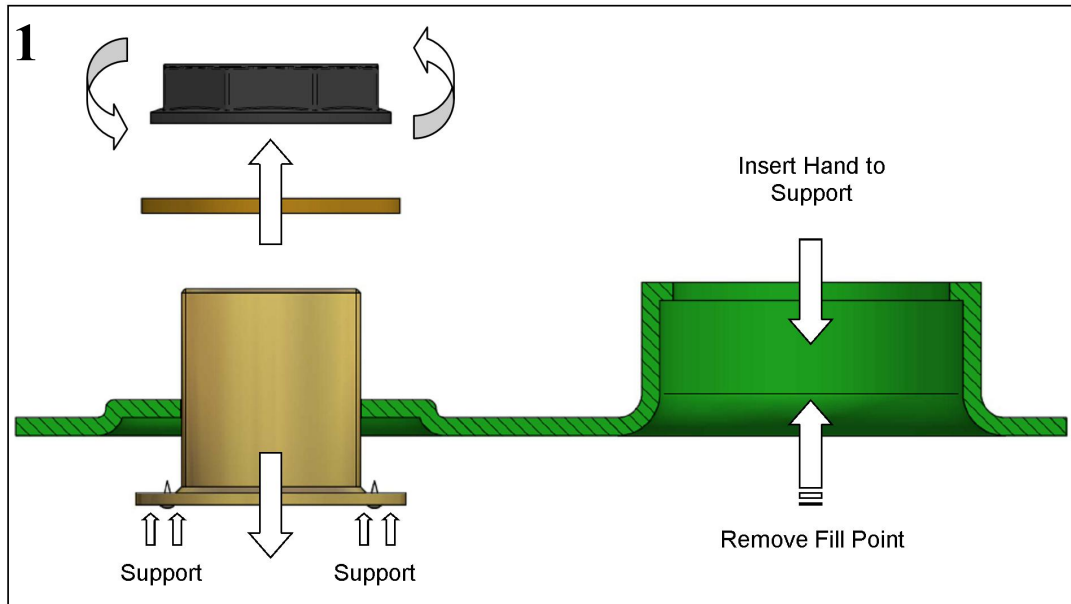

## Tools

Adjustable Spanner (min 65mm—max 85mm)

## Instructions

- Remove 4" Screw Cap
- Put hand through 4" Inspection port and support the 2" Fill point from the inside of the tank (1)
- Unscrew 2" Nut and washer using an adjustable spanner (1)
- With a hand supporting the fill point from the inside push the fill point into the tank and remove through the 4" inspection port (1)
- Prepare lockable fill point for assembly by fitting the o-ring into the channel on the underside of fill point and apply Loctite to the threads
- Insert the studded screw insert through the 4" inspection port and push up through the existing 2" hole (2)
- Whilst still supporting the screw insert from the inside, fully screw the lockable fill point onto the insert ensuring that the o-ring is seated correctly (2)
- Finally, securely tighten the fill point to the tank using an adjustable spanner

## Issued By:

Clarehill Plastics Ltd, 21 Clarehill Road, Moira, Northern Ireland, BT67 0PB.

T: +44 (0)28 92611077

F: +44 (0)28 92612672

E: info@oil-tanks.co.uk

W: www.oil-tanks.co.uk